

SD2EX-B4

7/8-14 UNF • Q__ 50 l/min (13 GPM) • p_{max} 350 bar (5100 PSI)









Technical Features

- Valve and solenoid design prevents a surface temperature capable of igniting
- Solenoid coil in acc. with directive 2014/34/EU (ATEX) for explosion-hazard zones
- Explosion protection for gas, dust, and mining; solutions for all zones
- Solenoid with encapsulated enclosure
- Hardened precision parts
- High flow capacity and high transmitted hydraulic power
- All ports may be fully pressurised
- > Wide range of manual overrides available
- > Coils interchangeable within Argo-Hytos ATEX/IECEx product line
- In the standard version, the valve is zinc-coated for 520 h protection acc. to ISO 9227

Technical Data

Value size / Cartridge sa	n iitu		7/0 1/1 LINE 2	A / DA /C 10 A	
Valve size / Cartridge cavity			7/8-14 UNF-2A / B4 (C-10-4)		
Max. flow		l/min (GPM)	50 (13.2)		
Max. operating pressure		bar (PSI)	350 (5080)		
Fluid temperature range		°C (°F)	-30 +70 (-22 +158)		
Max. switching frequency		1/h	15 000		
Weigh with coil		kg (lbs)	1.62 (3.57)		
Technical Data - Explosion-proof Solenoid					
Voltage type			AC 50 / 60 Hz	DC	
Available nominal volta	Available nominal voltages U _N		110, 230	12, 24, 48, 110	
Available nominal input power		W	10		
Supply voltage fluctuations			U _N ± 10 %		
Duty cycle			S1 (100 % ED)		
Enclosure type acc. to EN 60529			IP66 / IP68*		
*Test procedure IP68: Pressure 1 m under water, test duration 24 h.					
The indicated IP protection level is only achieved if the cable is properly mounted.					
Weight (solenoid only)		kg (lbs)	1.3 (2.87)		
Ambient temperature range					
T4	/ 10 W	°C (°F)	-30 +70 (-22 +158)		
Temperature class / T5	/ 10 W		-30 +55 (-22 +131)		
T6	/ 10 W		-30 +45 (-22 +113)		

		Datasheet	Туре
General information		GI_0060	Products and operating conditions
Operating Instructions		4090	
Coil types		C_8007	74 EX 18
Value badies	In-line mounted	SB_0018	SB-B4*
valve bodies	In-line mounted Sandwich mounted	SB-04(06)_0028	SB-*B4*
Cavity details / Form tools		SMT_0019	SMT-B4*
Spare parts		SP_8010	


ATEX/IECEx Classification

	EPS14ATEX1744 X				
	€x M2 Ex mb Mb				
AC	⟨ Il 2G Ex mb IIC T4, T5, T6 Gb				
	⟨€x⟩ II 2D Ex mb IIIC T135°C, T100°C, T85°C Db				
	€x I M2 Ex e mb I Mb				
DC	⟨Ex⟩ 2G Ex e mb C T4, T5, T6 Gb				
	⟨ II 2D Ex tb IIIC T135°C, T100°C, T85°C Db				
	IECEx EPS14.0064 X				
	IECEX EPS 14.0064 X				
	Ex mb Mb				
AC	12027 2131 11000 177				
AC	Ex mb I Mb				
AC	Ex mb IIC T4, T5, T6 Gb Ex mb IIC T135°C, T100°C, T85°C Db				
	Ex mb Mb Ex mb IC T4, T5, T6 Gb Ex mb IIC T135°C, T100°C, T85°C Db Ex e mb Mb				
	Ex mb IIC T4, T5, T6 Gb Ex mb IIC T135°C, T100°C, T85°C Db				

Characteristics measured at $v = 32 \text{ mm}^2/\text{s}$ (156 SUS)


Operating limits (p-Q)

Ambient temperature 70 °C (158 °F), Voltage U_0 -10 % (24 V DC), Power P_0 10 W

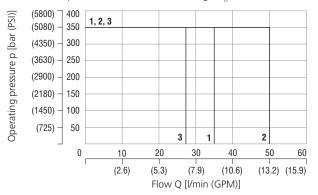

	Model	Direction		Model	Direction
1	2Z11	3→2, 4→1	2	2X21	3→4, 2→1
1	2Z51	$3 \to 4, 2 \to 1$	3	2X21	$3 \to 2, 4 \to 1$

Pressure drop related to flow rate (∆p-Q)

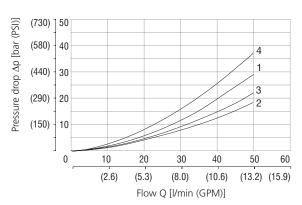


	Model	Direction		Model	Direction
1	2Z11	3→2	3	2X21	3→2
1	2Z11	4→1	4	2X21	4→1
2	2Z51	3→4	3	2X21	3→4
3	2Z51	2→1	2	2X21	2→1


For operating limits under conditions other than shown contact the technical support.

www.argo-hytos.com



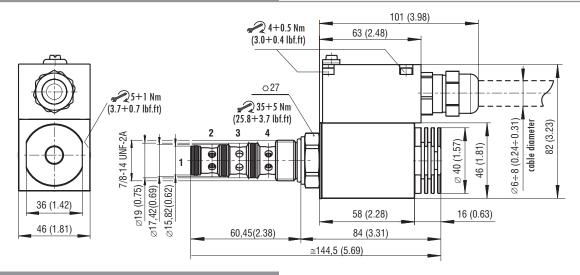

Manual Override in millimeters (inches)

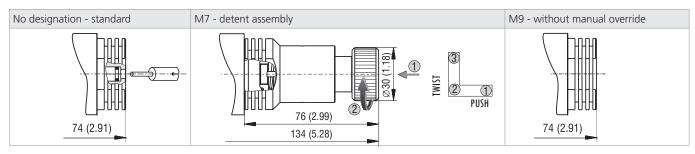

In case of solenoid malfunction or power failure, the spool of the valve can be shifted by manual override. For alternative manual overrides contact our technical support.

Ordering Code

24 V DC / 0.39 A

48 V DC / 0.19 A


110 V DC / 0.094 A

110 V AC / 0.112 A

230 V AC / 0.052 A

50/60 Hz, fix installed cable

AC voltage

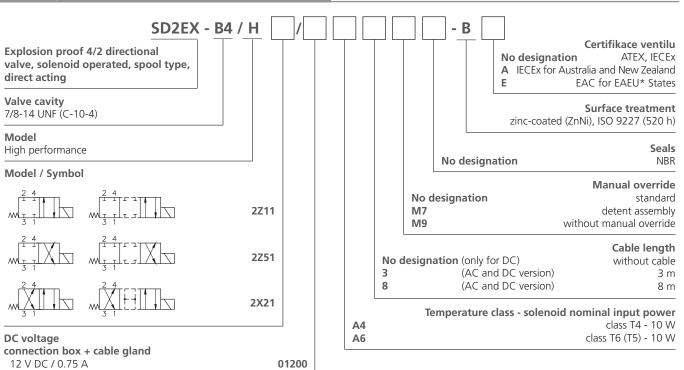

*EAEU= Eurasian Economic Union, certificate according to TR TS 012/2011 valid for the Russian Federation, Belarus, Armenia, Kazakhstan and Kyrgyzstan.

Besides the shown, commonly used valve versions other special models are available. Contact our technical support for their identification, feasibility and operating limits.

www.argo-hytos.com

02400

04800

11000

11050

23050



Marking of solenoid

10 W

Schienle Magnettechnik und Elektronik GmbH. In Oberwiesen 3, D-88682 Salem, www.schienle.de EX18 046 10W 24 V DC IP66 / IP68 $U_N = 24 \text{ V DC } R_{20} = 61.8 \ \Omega \ I_G = 0.34 \ A \ P_{20} = 9.3 \ W$ EPS 14 ATEX 1 744 X / IECEx EPS 14.0064X I M2 Ex e mb I Mb II 26 Ex e mb II CT4, T5, T6 Gb II 20 Ex tb IIIC T135°C, T100°C, T85°C Db T4 (T135°C) -40°C \leq Tamb \leq +70°C \leq T3 (T100°C) -40°C \leq Tamb \leq +55°C T6 (T85°C) -40°C \leq Tamb \leq +45°C

external fuse $I_N \le 3x I_G$

FA2020-0694/008 42140900 09/20

Marking of non-electrical part of valve

ATEX / IECEx



12345600 0810/1234567

CE

SD2EX-B4/H2X21/02400A48-B

I M2 Ex h I Mb

II 2G Ex h IIC T4, T5, T6 Gb II 2D Ex h IIIC T135°C...T85°C Db

-30°C ≤ Tfluid ≥ +70°C

Made in Czech Republic

EAC



12345600 0810/1234567



SD2EX-B4/H2X21/02400A48-BE

I Mb c k II Gb c k IIC T6...T4 III Db c k IIIC T85°C...T135°C

-30°C ≤ Tfluid ≥ +70°C

Made in Czech Republic

Group I (Mining)

ATEX mark of conformity to the 2014/34/EU directive and to the applicable technical norms

Group I for mines

M2 High protection - equipment category

Ex e mb Type of protection: e - increased safety, mb - encapsulated

I Gas group (methane)

Mb Equipment protection level - high level protection for explosive atmosphere

Group II

ATEX mark of conformity to the 2014/34/EU directive and to the applicable technical norms

II 2G Solenoid for surface plants with gas and vapors environment for zones 1 and 2 II 2D Solenoid for surface plants with dust environment for zones 21 and 22

Ex e mb Type of protection: e - increased safety, mb - encapsulated

Ex tb Type of protection: tb - protection by enclosure IIC Equipment suitable for substances (gas) of all group

IIIC Equipment suitable for all kinds of dust

T6/T4 Temperature class (maximum solenoid surface temperature)

T85/T135 Maximum solenoid surface temperature

Gb Equipment protection level - high level protection for explosive gas atmosphere
Db Equipment protection level - high level protection for explosive dust atmosphere



Initial installation

- > The ambient temperature range shall not overstep the temperatures given in the chapter Technical Data Explosion proof solenoid (page 1). The maximum temperature of the medium (generally hydraulic fluid) shall not exceed 70 °C (158 °F).
- > It is the users duty to ensure free and unhindered heat emission during operation. This means that the solenoid shall neither be covered not stored immediately adjecent to heat sources (e.g. fan heaters) during operation.
- > Care is to be given that the solenoid is not subjected to direct sunlight during operation.

Installation notice - installation, mounting, demounting

- > Installing the type V DC for temperature class T4 a cable with an ambient operating temperature of at least +105 °C (+221 °F) is to be used. For T5 and T6 a cable with an ambient operating temperature of a least +90 °C (+194 °F) is sufficient. The fastening torque on the cable gland depends of the used cable and is to be determined by installing user.
- When installing the V DC solenoid type, please note the fastening torque of the screws (4 Nm or 2.95 lbf.ft) and of the Connection box (0.4 Nm or 0.30 lbf.ft).
- > When installing the V DC solenoid connection box an appropriate wires max. 2.0 mm2 are to be used. When installing the V DC solenoid grounding an appropriate cable shoe M3 - 0.75 mm2 with an ambient operating temperature of at least +125 °C or +257 °F) is to be used.
- > The cable shoe fix by grounding screw next to the connection box under the cover of the solenoid.
- The user has to safeguard each solenoid with a fuse: $I_n \le 3xI_G$, with tigger characteristic "slow blow". (I_G values see Operating Instructions HA 4090 - Table 2). The breaking capacity of the fuse link has to be stronger than the max short circuit current at the users operating area.
- > EX-secured components must be used during mounting in case the fuse and/or the interface are within the EX-range.
- > In addition, the solenoid may be connected to ground via the purpose-built ground clamp an the connector casing.

Safety notice - please read carefully

- > In case the solenoid shows any signs of a defect, malfunctioning or external damage (including corrosion), the device must immediately be taken out of operation.
- Any deposits on the surface of the device shall not obstruct heat emission.
- > To maintain legibility of the date plate, the solenoid must not be coated.

- > Always disconnect the solenoid from the power supply before any maintenance or other work on it.

- › Always exchange the complete solenoid. Do not try to repair the solenoid. > In no case shall any changes be made to the solenoid or the connecting cable.
- > Demount the solenoid only in secure areas (not in EX-areas). If this is not possible, the solenoid must cool for 10 minutes minimum.



Page 4 www.argo-hytos.com