

Manual

Filter and Recirculating Pump Unit Ecoline UMPC 045





Safety and operating instructions

Read safety and operating instructions before use.

Note: The indicated data only serve to describe the product. Specifications regarding the use of this product are only examples and suggestions. Catalog specifications are no guaranteed features. The information given does not release the user from his / her own assessments and inspection.

Our products are subject to a natural wear and aging process.

© All rights are reserved by ARGO-HYTOS GMBH, even in the event of industrial property rights. Any right of disposal such as copying and distribution rights shall remain with us.

The picture on the title page shows a configuration example. The delivered product may thus differ from the illustration.

Content

	Content	2
1.	About this documentation	
1.1	Applicability of this documentation	
1.2	Required and supplementary documentation	
1.3	Presentation of information	
1.3.1	Safety instructions	
1.3.2	Symbols	
1.3.3	Terms	
1.3.4	Abbreviations	
2.	Safety instructions	6
2.1	About this chapter	
2.2	Intended use	
2.3	Improper use	
2.4	Reasonable foreseeable misuse	
2.5	Qualification of personnel	
2.6	General safety instructions	
2.7	Product and technology related safety instructions	
3.	General instructions	8
4.	Scope of delivery	9
5.	About this product	10
5.1	Component overview	
5.2	Controls	
5.3	Identification of the product	
6.	Transport and storage	
6.1	Transport	
6.2	Storage	15
7.	Assembly	16
8.	Commissioning	17
8.1	After switching on	
8.2	In case of power failure	
8.3	Venting	17
9.	Service	
9.1	Switching on the device	
9.2.	Data collection	
9.3	Menu structure LubMon Visu	21
10.	Operation	
10.1	Filtering of hydraulic fluids when refilling	
10.2	Filtering of liquids in the bypass flow	
10.3	Pumping of hydraulic fluids (e.g. waste oil, filter is bypassed)	
10.4	Monitoring the oil cleanliness when filling machines and systems	
10.5	Monitoring the oil cleanliness when cleaning machines and systems in the bypass flow	
10.6	Monitoring modes	
10.6.1	Continuous measurement without automatic shutdown (Mode 1)	
10.6.2	Measurement with cleanliness class specific shutdown (Mode 2)	

11.	Repair and maintenance	
11.1	Maintenance overview	
11.2	Changing the filter element	
11.3	Removing the filter element	
11.3.1	Removing the filter element from the cover	
11.3.2	Attaching the filter element	
11.3.3	Installing the filter element	
11.4	Checking / changing the suction filter element (pump protection filter)	
11.4.1	Removing the suction filter	
11.4.2	Installing the suction filter	
12.	Decommissioning	
10	Disassembly	24
13.	Disassembly	
14.	Disposal	
14.1	Environmental protection	
45	Extension and conversion	20
15.	Extension and conversion	
16.	Troubleshooting	
16.1	Basic procedure	
47	To the first set of the states	20
17. 17.1	Technical specifications	
17.1	Drawing	
17.2	Technical data	
17.3	Operating conditions	
17.4	Hydraulic circuit diagram	
18.	Appendix	
18.1	Declaration of conformity	
18.2	Spare parts	

1. About this documentation

1.1 Applicability of the documentation

This documentation is applicable for the following product:

> Filter and Recirculating Pump Unit UMPC 045

This documentation is written for technicians, operators, service engineers and system operators.

This document contains important information for safe and appropriate assembly, transport, activation, operation, usage, servicing, dismantling and simple troubleshooting.

> Read this document completely and in particular Chapter 2, "Safety Instructions", before you work with the product.

1.2 Required and supplementary documentation

Do not commission the product until you have received the documentation marked with the book icon and before you have understood and complied with the information therein.

7	Title	Document number	Document type
	Data sheet	8070_xD	

Table 1: Required and supplementary documentation

1.3 Presentation of information

So that this document can help you to work quickly and safely with your product, we use standardized safety instructions, symbols, terms and abbreviations. For better understanding, these are explained in the following sections.

1.3.1 Safety instructions

In this documentation, safety instructions are faced with a sequence of actions which would result in the danger of personal injury or damage to equipment. The measures described to avoid theses hazards must be observed.

Safety instructions are as follows:

SIGNAL WORD

Type and source of danger

- > Consequences of the danger
- > Escaping or averting the danger
- > Rescue (optional)
- > Warning signal: draws attention to the danger
- > Signal word: indicates the severity of the danger
- > Type and source of danger: specifies the type and source of the danger
- > Consequences: describes the consequences in the event of non-compliance
- > Action: indicates how the danger can be avoided

Warning sign, signal word		Meaning
	DANGER	Indicates a dangerous situation which results in death or serious injury if not avoided.
	WARNING	Indicates a dangerous situation which may result in death or serious bodily injury if not avoided.
	CAUTION	Indicates a dangerous situation which may result in light to moderate injury if not avoided.
	NOTE	Indicates property damage: The product or surrounding could be damaged.

Table 2: Hazard classes according to ANSI Z536.6-2006

www.argo-hytos.com

1.3.2 Symbols

The following symbols indicate notes which are not safety-relevant but increase the intelligibility of the documentation.

Symbols	Meaning
i	If this information is not observed, the product cannot optimally be used or operated.
>	Singular, independent action step / instruction
1. 2. 3.	Numbered instruction The numbers indicate that the action steps follow one another.
	This symbol indicates danger to equipment, material and environment.
	This symbol indicates the risk of personal injury (minor injury).
	This symbol indicates the risk of personal injury (death, serious bodily injury).
	This symbol specifies that protective gloves should be worn.
	This symbol specifies that safety shoes should be worn.
	This symbol specifies that protective goggles should be worn.
	This symbol specifies that the unit should be disconnected from the power supply.

Table 3: Meaning of symbols

1.3.3 Terms

In this documentation the following terms are used:

Term	Meaning

Table 4: Terms

1.3.4 Abbreviations

In this documentation the following abbreviations are used:

Term	Meaning
UMPC	Pumping unit with condition monitoring

Table 5: Abbreviations

2. Safety instructions

2.1 About this chapter

This product was manufactured according to the generally recognized standards of engineering. Nevertheless, there is a danger of injury or damage if you do not observe this chapter and the safety instructions in this documentation.

- > Read this document thoroughly and completely before working with the product.
- > Retain this document and ensure that it is available for all users at all times.
- > Always include the necessary documentation when passing the equipment along to a third party.

2.2 Intended use

This product is a hydraulic component.

You may use the product for the following:

- > for filtration of hydraulic fluids in the bypass flow on machines and systems, taking account of the technical data.
- > for filtration of hydraulic fluids during filling of machines and plants, taking into account the technical data
- > for pumping of hydraulic fluids (e.g. waste oil, filter element is bypassed), taking into account the technical data
- > for monitoring the oil cleanliness in the bypass flow during cleaning or filling of machines and plants

This product is intended for professional use only and not for private use.

"Intended use" also includes that you have completely read and understood this documentation, in particular Chapter 2 "Safety Instructions".

2.3 Improper use

Any other use than the intended use described, is improper and inadmissible.

If unsuitable products are installed or used in safety-related applications, unintended operating states may occur in the application, which may cause personal injury and / or property damage.

Therefore only use this product in safety-related applications if this use is explicitly specified and permitted in the product documentation, e.g. in explosion protection areas or in safety-related parts of a control system (functional safety).

ARGO-HYTOS GMBH assumes no liability for damages resulting from improper use. The risks associated with improper use are solely with the user.

2.4 Reasonable forseeable misuse

The delivery of the following media is forbidden:

> others than listed in Chapter 18.1 "Technical data"

especially:

- > flammable liquids such as petrol or thinner (explosion hazard)
- > foodstuffs
- > sludge and sediment

The operator alone is liable for damages resulting from improper use.

2.5 Qualification of personnel

The operations described in this document require fundamental knowledge of mechanics and hydraulics as well as knowledge of the appropriate technical terms. In order to ensure safe use, these operations may therefore only be carried out by a correspondingly skilled worker or an instructed person under the guidance of a skilled worker.

A skilled worker is someone who can - based on his / her technical education, knowledge and experience as well as knowledge of the respective regulations of the jobs assigned to him / her - recognize possible dangers and ensure appropriate safety measures. A skilled worker must observe the relevant technical regulations.

The device may be operated by the following individuals:

- > Persons aged 14 years or older who have read and understood these operating instructions.
- > Persons aged 14 years or older who have been instructed by trained staff.
- > Qualified / specialized staff with adequate training.

The device may be repaired or maintained by the following individuals:

> Qualified / specialized staff with adequate training.

Work on electrical components:

> Only electrical specialists with adequate training.

2.6 General safety instructions

- > Observe the valid regulations for accident prevention and environmental protection.
- > Observe the safety regulations and requirements of the country in which the product is used / applied.
- > Only use ARGO-HYTOS products that are in technically perfect condition.
- > Observe all instructions on the product.
- > People who assemble, operate, disassemble or maintain ARGO-HYTOS products may not do so under the influence of alcohol, other drugs or medications that affect the responsiveness.
- > Only use manufacturer-approved accessories and spare parts, in order to prevent personal danger due to unsuitable spare parts.
- > Observe the technical data and ambient specifications specified in the product documentation.
- > If unsuitable products are used or installed in safety-relevant applications, unintended operating states may occur in the application, which can cause personal injury and / or material damage. Therefore only use the product in safety-relevant applications if this use is explicitly specified and permitted in the product documentation.
- > You may only put the product into operation, when it has been established that the final product (e.g. a machine or system), into which the ARGO-HYTOS products have been installed, complies with the country-specific regulations, safety regulations and standards of the application.

2.7 Product and technology related safety instructions



Leaked hydraulic oil

Environmental hazard / risk of slipping.

- > In case of spills, cover the oil-covered surface immediately with an oil-binding medium.
- > Then immediately dispose of the oil-binding medium according to the national environmental regulations.

A

Ignition hazard

Risk of electrostatic charge by poorly conducting hydraulic fluid.

If the electrical conductivity of the hydraulic fluid is not known, please contact the manufacturer of the hydraulic fluid.




Risk of burns

Contact temperatures according to DIN EN563 (3) and DIN EN13202 (4) may be exceeded during operation.

> Allow the off-line filter unit to cool down before touching it.

For prevention of material damage and product damage

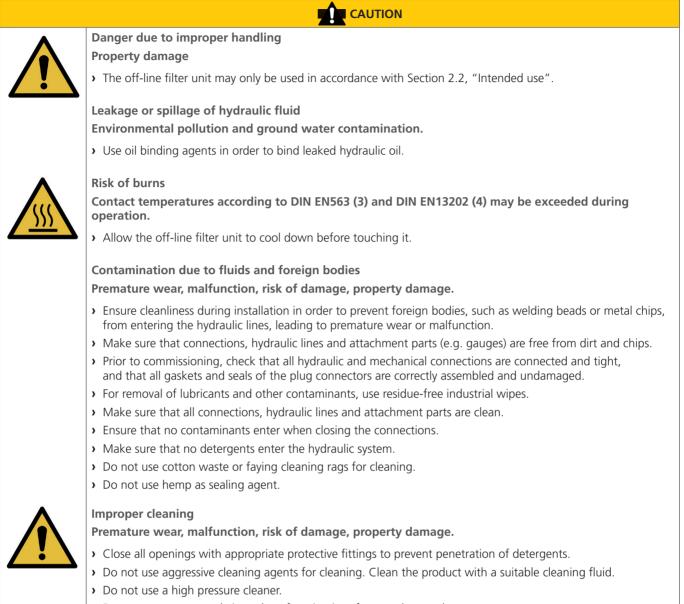

> Do not use compressed air to clean function interfaces such as seal areas.

This package includes:

- > 1 Filter and Recirculating Pump Unit UMPC 045
- > 1 Operating manual

5. About this product

5.1 Component overview

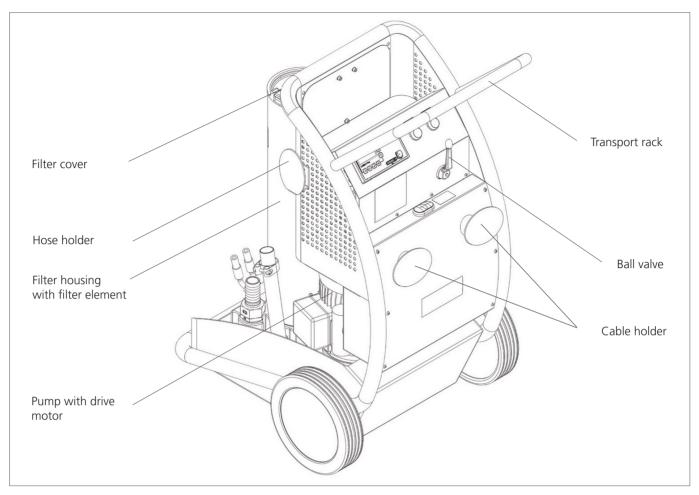


Fig.1: Component overview

Pump with drive motor

The pump unit driven by an electric motor is responsible for media conveyance.

Filter housing with filter element

The filter housing contains the replaceable filter elements.

Changing the filter elements is described in "11.2 Changing the filter element" on page 30.

Hose holder

On both sides of the unit there are hose holders on which the pressure hoses (suction and pressure side) can be wound for better transport in case of non-use.

Filter cover

The housing cover closes the filter housing and serves, inter alia, for venting.

Transport rack

The transport rack is equipped with two wheels. This hand truck enables the unit to be transported without difficulty (weight: 97 kg) even to inaccessible / narrow areas.

Ball valve

The 3-way ball valve makes it possible to determine whether the oil cleanliness monitoring is to be performed before or after the filter.

Cable holder

On the front of the unit there is a cable holder, on which the 230V or 400V power cable can be wound up for better transport in case of non-use.

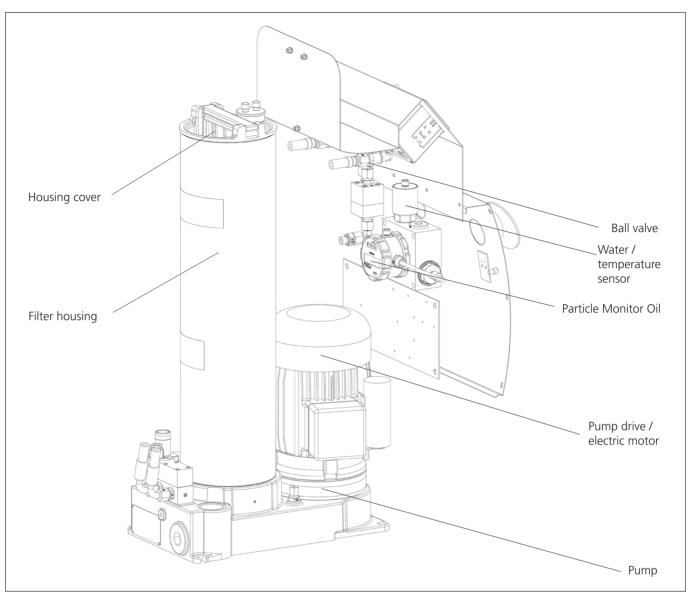


Fig.2: Component overview 2 (transport rack removed)

Filter housing

The filter housing contains the replaceable filter elements.

Housing cover

The housing cover closes the filter housing and serves, inter alia, for venting.

Ball valve

The 3-way ball valve makes it possible to determine whether the oil cleanliness monitoring is to be performed before or after the filter.

Water / temperature sensor

The water / temperature sensor measures the relative humidity in the oil as well as the temperature and shows the degree of saturation with water.

Particle Monitor Oil

The particle monitor OPCom allows a particle measurement according to the latest standard. Thus, the level of contamination as well as the trend of the cleanliness of fluids can be observed.

Pump drive / electric motor

The pump unit driven by an electric motor is responsible for media conveyance.

Pump

The pump unit driven by an electric motor is responsible for media conveyance.

www.argo-hytos.com

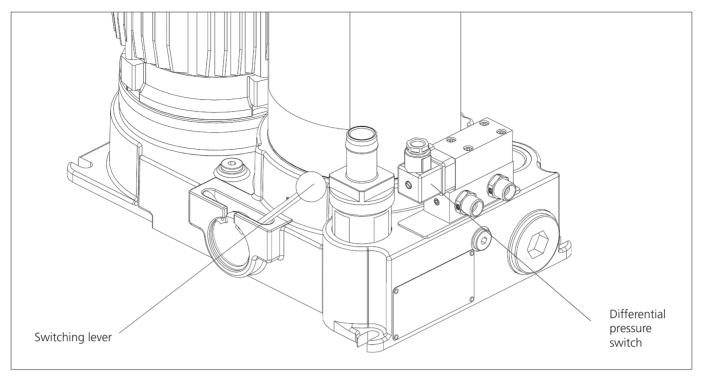


Fig.3: Component overview 3 (transport rack removed)


Switching lever

This lever is used to switch the unit from "pumping" mode to "filtering".

Differential pressure switch

This switch monitors the pressure of the medium before and after the filter.

Thus, when the pressure difference is too high (differential pressure due to a dirty filter element), the unit independently switches itself off.

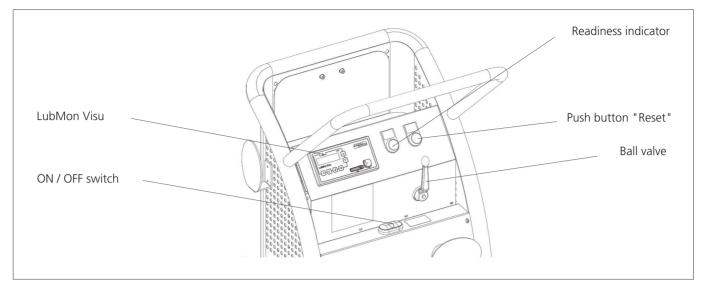



ON / OFF switch

This switch is used to turn the unit on or off when the plug is plugged in.

LubMonVisu

The LubMon Visu is a display device and simultaneously a data memory for the ARGO-HYTOS oil condition sensors.

Readiness indicator

Depending on the switch position of the ON / OFF switch, this light indicates the operating state of the unit. It lights up as long as the unit is switched on.

Push button "Reset"

This push button is used for reset in the event of a fault or in the case of an automatic switch-off. It must be actuated in order to restart the device after the message has occurred.

Ball valve

The 3-way ball valve makes it possible to determine whether the oil cleanliness monitoring is to be performed before or after the filter.

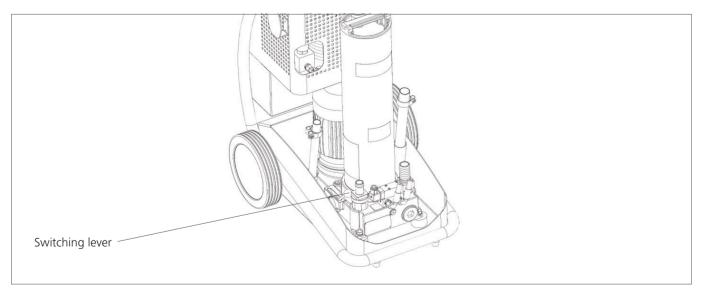


Fig.5: Operating elements 2

Switching lever

This lever is used to switch the unit from "pumping" mode to "filtering".

Туре	D - 76703 Kraichtal ARGO	Manufacturing date (encrypted)
Fineness of the filter 🔍	Filter Element	
Nominal volume flow	Feinheit 🗋 µm	─ Filter element type
	Q nom = ⊡ l/min p max = ⊡ bar	Consecutive number
Maximum operating pressure	Seriennr.: /1	
Serial number		,

Fig.6: Nameplate

6.1 Transport

The unit should be transported horizontally as there is always a certain amount of oil inside the filter unit (in the filter as well as in the pump), which will leak out during other transport and lead to soiling.

Observe the notes in Chapter 2 "Safety instructions".

Ensure that the unit is in a safe position (tipping hazard).

To prevent the leakage of residual oil, seal hoses at the open connections before transport.

During transport, secure the suction hose and the pressure hose in the brackets provided for this purpose in order to avoid possible leakage of residual oil.

Do not use stair steps or elevated steps.




Fig. 7: Transport rack

The unit is mounted on a transport rack with two wheels.

This hand truck enables the unit to be transported without difficulty (weight: 97 kg) even to inaccessible / narrow areas. For transport, the unit can be rolled over the wheels by pushing the handle (see arrow) and transported to the destination.

6.2 Storage

The UMPC 045 filter unit should be stored in a confined space to protect it from humidity and condensation.

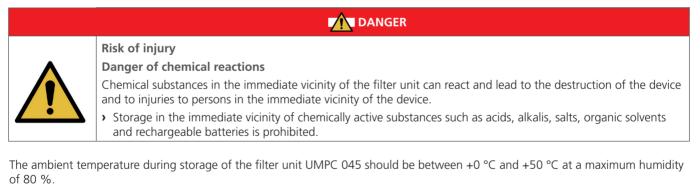

Before storage over a period of more than 6 months, the device should be filled with oil in order to preserve it against corrosion.



Risk of functional impairmentFaulty power supplyAlways consider the country-specific regulations.

Let - prior to commissioning - an electrician check whether:

- > the mains voltage matches with the voltage specified on the type plate of the motor,
- > the power source has appropriately been secured (16 A),
- > the cross-section is of sufficient size,
- > cable and connection to the power source are in perfect condition.

The following steps are to be followed in detail:

> connect the 230V (or 400V) voltage plug to the local power supply.

8. Commissioning

8.1 After switching on

> Check the filter unit for leaks.

> Check that the device is properly vented.

8.2 In case of power failure

In order to prevent unintentional starting of the unit, always switch off and unplug the unit.

8.3 Venting

To bleed the unit automatically, loosen the black cap (3) on the ventilating valve (1).



The ventilating valve (1) can be checked by means of manual venting (red cap / 2). After repeated actuation of the valve, oil should escape. This check also prevents the float valve from being glued.

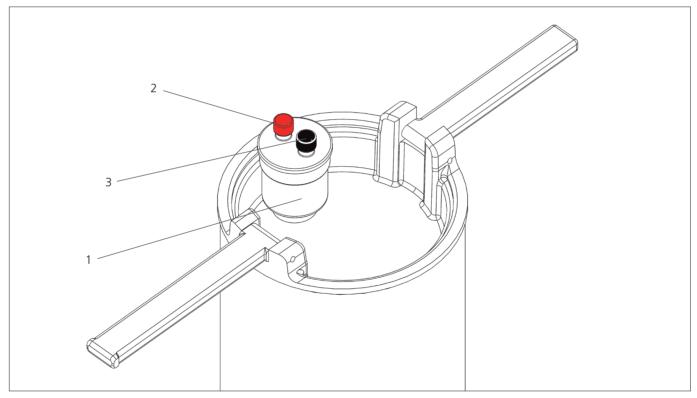


Fig.8: Venting

9. Operation



Fig.9: Control panel

	Button	Function(s)
1		Alarm light green
2		Alarm light yellow
3		Alarm light red
4		Readiness indicator
5	[▲]	Within the menu: scroll up
6	[▼]	Within the menu: scroll down
7		Connection socket USB Type B
8		Slot for SD card
9	[*]	Canceling the current input / back
10	[√]	Confirmation of a selected option / value
11	[▶]	Select the next record in the menu
12	[◀]	Select the previous record in the menu
13		Display

9.1 Switching on the device

To turn the unit on, press the ON / OFF switch until the readiness indicator lights ("Fig. 4: Controls 1" on page 13).



Fig.10: Power-on screen



During a brief initialization phase, the display shows the version screen, which provides information about the implemented software.

The welcome screen appears.

Fig.11: Start screen

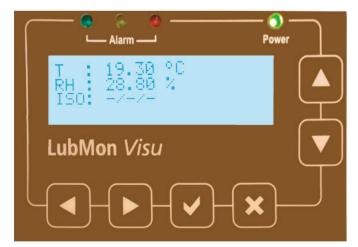


Fig.12: Initialization screen

After the device has been initialized, the value display appears.

The following values are displayed on the display:


 Temperature
 T
 [°C]

 Relative humidity
 RH
 [%]

 ISO
 4 μm, 6 μm 14 μm (acc. to ISO 4406: 1999)

9.2 Data collection

The UMPC 045 is equipped with a data memory which internally stores up to 1,000 results. When the memory capacity has been reached, the last measured value is stored and the oldest measured value is overwritten. The memory capacity is expandable by using an SD card.

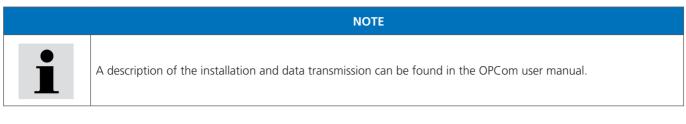

- 1. Connect a data cable to the USB (Type B) jack ("Fig. 9: Control panel" on page 18) pos. 7.
- 2. Connect this cable to a PC, laptop, tablet or smartphone on which the appropriate software is installed.



The stored results are transferred to the connected devices such as PC, laptop, tablet or smartphone and can be stored there. Optionally, the data can be transferred to network-enabled devices via a wireless connection.

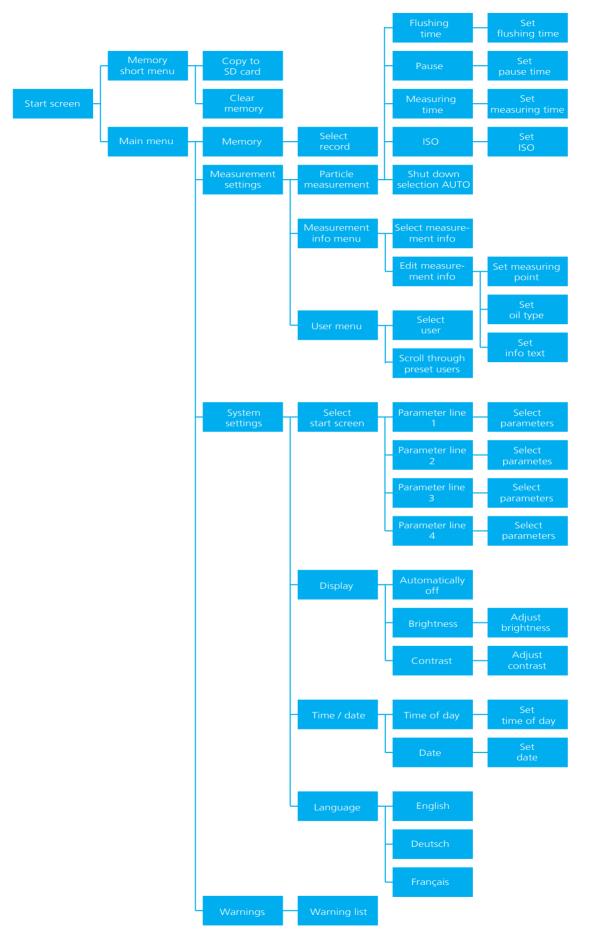


Fig.13: Menu structure

10. Operation

	Exposure to spilled oil
	Injury / risk of slipping
/!\	• If oil leaks, the oil-covered area must be shut of immediately and covered with an oil binding medium (risk of slipping).
	Static charge
	Sparking
	 There is a risk of static charge when using poorly conducting hydraulic or lubricating oils. In this case, please consult the manufacturer.
	NOTE
	NOTE Inaccurate results
i	Inaccurate results
i	Inaccurate results Erroneous measurements The measured values from the first 5 minutes should not be taken into account as the particle counter is
i	 Inaccurate results Erroneous measurements The measured values from the first 5 minutes should not be taken into account as the particle counter is initializing and the hydraulic circuit has to stabilize (air bubbles, flushing, etc.). The filter unit has a suction protection strainer on the suction side, which must be serviced regularly.

Operation	Position "lever"	Position "3-way ball valve"	Comment
Filtering when refilling	"Filtering"		see 10.1
Filtering in the bypass circuit	"Filtering"		see 10.2
Pumping	"Pumping"		see 10.3
Monitoring the oil cleanliness when filling	"Filtering"	Particle counting filling	see 10.4
Monitoring the oil cleanliness during cleaning	"Filtering"	Particle counting cleaning	see 10.5

10.1 Filtering of hydraulic fluids when refilling

- 1. Connect the filter unit to a power source.
- 2. Insert the suction lance / suction pipe into the oil barrel.
- 3. Place the discharge pipe in a container (e.g. hydraulic tank).

 NOTE

 Incorrect insertion of the discharge pipe

 • Ensure that the discharge pipe is below the liquid surface.

4. Move the lever to the "Filtering" position.


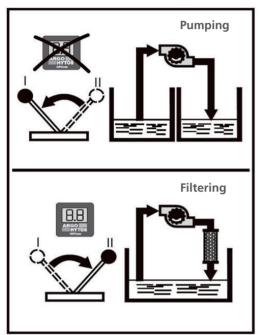


Fig. 14: Lever pumping / filtering


- 5. Switch on the filter unit at the on/off switch (circuit breaker).
- 6. Check the oil flow for a possible insufficient insertion depth of the suction pipe in the oil tank.



- 7. Monitor the filling level at the machine or system and switch off the filter unit at the circuit breaker after having reached the desired fill level.
- 8. Fix the suction lance / suction pipe and the discharge pipe to the corresponding brackets at the filter unit.

10.2 Filtering of liquids in the bypass flow

- 1. Connect the filter unit to a power source.
- 2. Insert the suction lance / suction pipe into the tank of the machine or system (e.g. hydraulic tank).
- 3. Place the discharge pipe into the machine or system container (e.g. hydraulic tank).



4. Move the lever to the "Filtering" position.

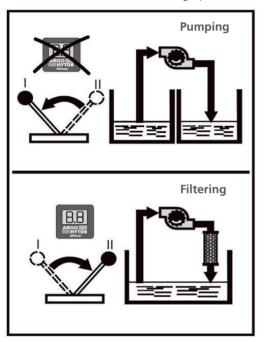


Fig. 15: Lever pumping / filtering

- 5. Switch on the filter unit at the on/off switch (circuit breaker).
- 6. Check the oil flow for a possible insufficient insertion depth of the suction pipe in the oil tank.
- 7. After completion of the filtration, pull the suction lance / suction tube out of the container of the machine or system (e.g. hydraulic tank) and suck air for max. 30 seconds. Thus, the residual oil from the filter housing and the lines above the oil level is fed back into the container of the machine or system via the discharge pipe.
- 8. Move the lever to the "Pumping" position.
- 9. Switch off the filter unit at the circuit breaker.
- 10. Fix the suction lance / suction pipe and the discharge pipe to the corresponding brackets at the filter unit.

	NOTE
	Achieving the maximum cleaning performance
1	 In order to avoid a short circuit of the oil flow, the distance between the suction and the pressure connection should be as large as possible.
	Falsification of results
	• Make sure that the device is properly vented.
	• An exact determination of the cleanliness class is possible in a viscosity range of 15 mm ² /s to 250 mm ² /s.

10.3 Pumping of hydraulic fluids (e.g. waste oil, filter is bypassed)

- 1. Connect the filter unit to a power source.
- 2. Insert the suction lance / suction pipe into the tank of the machine or system (e.g. hydraulic tank).
- 3. Place the discharge pipe into the container (e.g. empty oil barrel).
- 4. Move the lever to the "Pumping" position.

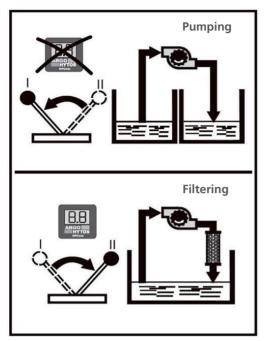


Fig. 16: Lever pumping / filtering


- 5. Switch on the filter unit at the on/off switch.
- 6. Check the oil flow (observe sufficient immersion depth of the suction lance in the hydraulic fluid).




- 7. Monitor the process.
- 8. After the machine or system has been completely emptied, switch off the filter unit at the circuit breaker.
- 9. Fix the suction lance / suction pipe and the discharge pipe to the corresponding brackets at the filter unit.

10.4 Monitoring the oil cleanliness when filling machines and systems

- 1. Connect the filter unit to a power source.
- 2. Insert the suction lance / suction pipe into the tank of the machine or system (e.g. hydraulic tank).
- 3. Place the discharge pipe into the machine or system container (e.g. hydraulic tank).




4. Move the lever to the "Filtering" position.

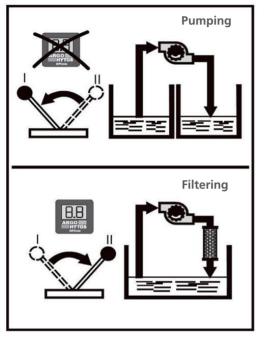

5. Set the three-way valve to the vertical position

Particle Counting "Filling" (AFTER filter)

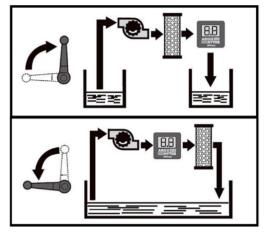

Particle Counting "Cleaning" (BEFORE filter) Fig. 18: Three-way valve


Fig. 17: Lever pumping / filtering

- 6. Switch on the filter unit at the on/off switch (circuit breaker) and let it operate for approx. 5 min. (Initialization of the particle counter and ventilation of the system).
- 7. Monitor the operation.
- 8. After the machine or system has been completely emptied, switch off the filter unit at the circuit breaker.
- 9. Fix the suction lance / suction pipe and the discharge pipe to the corresponding brackets at the filter unit


NOTE
 No particle counting is possible with the "pumping" lever position.
• Make absolutely sure that the unit is completely vented. Air bubbles can falsify the measurement results!
• Make absolutely sure that the specified media temperatures of max. 80 ° C are observed.
Incorrect viscosities can falsify the measurement results!
• An exact determination of the cleanliness class is possible in a viscosity range of 15 mm ² / s to 250 mm ² / s.

10.5 Monitoring the oil cleanliness when cleaning machines and systems in the bypass flow

- 1. Connect the filter unit to a power source.
- 2. Insert the suction lance / suction pipe into the oil barrel (e.g. fresh oil).
- 3. Place the discharge pipe into the machine or system container (e.g. hydraulic tank).




4. Move the lever to the "Filtering" position.

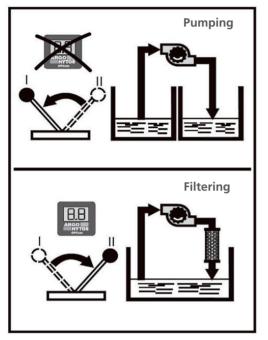

5. Set the three-way valve to the vertical position

Particle Counting "Filling" (AFTER filter)

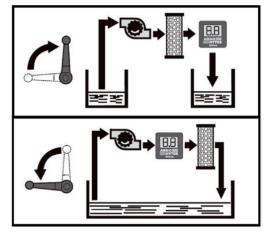

Particle Counting "Cleaning" (BEFORE filter) Fig. 20: Three-way valve

Fig. 19: Lever pumping / filtering

- 6. Switch on the filter unit at the on/off switch (circuit breaker) and let it operate for approx. 5 min. (Initialization of the particle counter and ventilation of the system).
- 7. Monitor the operation.
- 8. After the machine or system has been completely emptied, switch off the filter unit at the circuit breaker.
- 9. Move the lever to the "Pumping" position.
- 10. Fix the suction lance / suction pipe and the discharge pipe to the corresponding brackets on the filter unit.

10.6 Monitoring modes

After switching on the device, two modes are available:

10.6.1 Continuous measurement without automatic shutdown (Mode 1)

The sensors are started directly after switching on the pump. A rinsing time of the sensor system of 3 minutes is started. After the flushing time, the actual cleanliness control begins. The measured values are then output on the display.

10.6.2 Measurement with cleanliness class specific shutdown (Mode 2)



After the initialization screen (page 19, Fig. 12) has been displayed, press the "Hook" button to enter the "Automatic shutdown menu".

The desired cleanliness class can be set under ISO: -/-/-. These set values represent the ISO class to be achieved. It is also possible to set the measuring times and the break times of the sensors.

The flushing time is at least 3 min.

After setting the required parameters leave the menu with "X".

When the automatic mode is active, "AUTO" appears on the

The cleanliness classes must be reached three times for shut-

Only then the device switches off automatically.

Fig. 21: Automatic shutdown menu


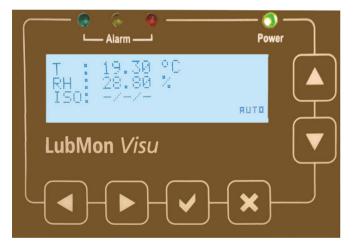


Fig. 22: Automatic active

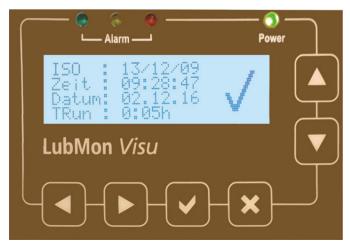

When switched off, an additional display appears, which lists the following items:

ISO : --/ -- /-- = Cleanliness class on shutdown Date

Time of day

main screen.

down.

TRun = Runtime until shutdown

The "RESET" light is also illuminated and the orange LED on the display flashes.

Fig. 23: Additional display



By pressing the "Hook" button, the auxiliary screen is deleted and the normal menu with the addition "SUCCESSFUL" appears.

By starting the pump, mode 1 is automatically activated and work can continue.

For automatic restarting, repeat the a.m. steps.

Fig. 24: Additional display

11. Repair and maintenance

	 Danger to life Risk of electric shock During repair work, turn off the unit and pull the mains plug.
	Hydraulic oil spills Environmental hazard / risk of slipping
<u>\</u>	 > Before maintenance and repair work, completely drain the unit. > In case of spills, cover the oil-covered surface immediately with an oil-binding medium. > Then immediately dispose of the oil-binding medium according to the national environmental regulations.
	Ignition hazard Risk of electrostatic charge by poorly conducting hydraulic fluid.
	 If the electrical conductivity of the hydraulic fluid is not known, please contact the manufacturer of the hydraulic fluid.
	Risk of burns
	Contact temperatures according to DIN EN563 (3) and DIN EN13202 (4) may be exceeded during operation.
	> Allow the filter to cool down before touching it.

ingress into the pump.
unit is no longer guaranteed. Interst coming in contact with the hydraulic medium, must be kept free of dirt and chips.

11.1 Maintenance overview

Except from the filter element and the suction strainer, the filter unit is maintenance-free.

Maintenance work	Maintenance interval
Checking / changing the filter element	Once the clogging indicator responds at a permissible viscosity.

11.2 Changing the filter element

- 1. Pump the filter element empty (see Chapter 10.2 "Filtering of liquids in the bypass flow", point 7).
- 2. Disconnect the off-line filter unit from the power supply and, if necessary, pull the mains plug.



Risk of burns

Contact temperatures according to DIN EN563 (3) and DIN EN13202 (4) may be exceeded during operation.

> Allow the filter unit to cool down before touching it.

11.3 Removing filter element



Fig. 25: Removing the filter element



11.3.1 Removing the filter element from the cover

Fig. 26: Removing the filter element from the cover

11.3.2 Attaching the filter element



Fig. 27: Attaching the filter element

- 1. Turn the housing cover (1) counterclockwise.
- Carefully remove the cover (1) with the filter element (2) from the filter tube.
 (The filter element is attached to the cover. Let the draining oil drip off into the housing.)

- 1. Push the filter element at the cover in arrow direction 1 and remove it in arrow direction 2.
- Dispose of the filter element according to the national environmental legislation (Waste code: Oil filter 16 01 07).

- Check the filter element type number. Does the laser inscription on the filter element match with the indications on the type plate or in the operating manual?
- 2. Attach the filter element in arrow direction 1 and lock it in arrow direction 2.

11.3.3 Installing the filter element



- When changing the filter element, always replace the O-ring in the cover (supplied with the filter element) (O-ring Order No. N007.1175, included with replacement filter elements).
- 2. Carefully insert the cover (1) with the filter element (2) into the filter tube.
- 3. Screw in the cover manually until it stops. A gap between the cover and the filter tube may remain visible.

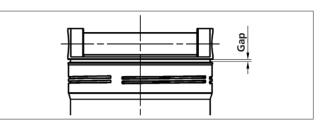


Fig. 28a: Installing the filter element

Fig. 28b: Gap at the filter cover



11.4 Checking / changing the suction filter element (pump protection filter)

11.4.1 Removing the suction filter

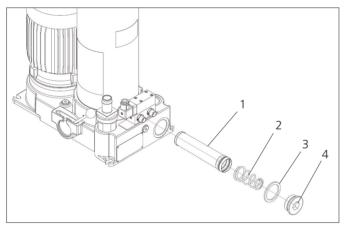


Fig. 29: Removing the suction filter

11.4.2 Installing the suction filter

- 1. Provide a drip tray for residual oil and the contaminated filter element.
- 2. Open the locking screw (4) with an Allen key AF 22.
- 3. Remove the contaminated element (1) with the spring (2) by pulling it slightly out of the housing.
- 4. Dispose of the suction filter element in an environmentally friendly manner (Waste code: Oil filter 16 01 07).

- 1. Always replace the sealing ring (3) after each change of the suction filter element.
- 2. Carefully insert the suction filter element (1) with the spring (2) into the pump block.
- 3. Screw in the locking screw (4) and tighten it with a torque of 25 \pm 2.5 Nm.
- 4. Check the locking screw for tightness after commissioning and tighten it if necessary.

NOTE



When the filter element is changed, oil accidentally spilled onto components of the filter and pumping unit can create the appearance of a leak.

> As far as possible - remove any residual oil from the device!

www.argo-hytos.com

The filter unit UMPC 045 is a component which does not have to be taken out of service. Therefore, the chapter in this manual does not contain any information.

This chapter does not contain any information for your device.

14.1 Environmental protection

Careless disposal of the filter unit UMPC 045 and the pressurized fluid can lead to environmental pollution. Therefore, dispose of the filter unit and the pressure fluid according to the national regulations of your country. Dispose of pressure fluid residues according to the relevant safety data sheets for these pressure fluids.

Do not modify the UMPC 045 filter unit.

	NOTE
1	The warranty of ARGO-HYTOS applies to the delivered configuration and extensions, which were taken into account during configuration. The warranty expires after a conversion or extension that goes beyond the conversions or extensions described here.

Unauthorized conversions or extensions, which are not described in this chapter, make the CE marking invalid.

16.1 Basic procedure

- You should also be systematic and targeted under time pressure. Random, unsupervised dismantling and adjustment of setting values can lead to the fact, that the original cause of the fault cannot be detected anymore.
- > Get an overview on the function of the particle monitor OPCom Portable in connection with the overall system.
- > Try to find out whether the product has provided the required function in the overall system before the error occured.
- > Try to record changes to the overall system in which the particle monitor OPCom Portable is installed:
- > Have the operating conditions or the area of application of the particle monitor OPCom Portable been changed?
- > Have modifications (e.g. conversions) or repairs been carried out at the overall system (device / unit, electrics, control) or at the product? If so, which modifications?
- > Has the product or the device been operated correctly?
- > How does the fault tend to show?
- > Get a clear impression about the cause of trouble. Possibly consult the direct operator.


If you cannot correct the error, please contact one of the contact addresses listed under www.argo-hytos.com.


If the device should not accept any more entries, turn it off briefly and then turn it on again after a few seconds. After initialization, the particle monitor will operate as usual.

Error	Reason	Measure
E-motor can not be	E-cable or plug defective	Have the cables disconnected by qualified personnel
switched on during	 Missing mains voltage 	Establish power supply / activate electrical fuse
commissioning	 Motor defective 	Replace motor (repair at manufacturer)
	 Pump defective 	Replace pump (repair at manufacturer)
	 Too high viscosity (medium) 	> Heat medium
E-motor switches off	 Filter element contaminated 	Replace filter element
during operation	 Suction strainer contaminated 	 Replace the suction strainer
	 Viscosity too high 	> Heat medium
	 Suction height too great 	Adjust suction height
	Leakage on the suction side	 Replace the suction hose or seal the connection points (retighten them)
	> Wear of the pump	Replace pump (repair at manufacturer)
Too loud operating noise	 Filter element contaminated Susting studies and sustained 	 Replace filter element
noise	 Suction strainer contaminated Viscosity too high 	 Replace the suction strainer Heat medium
	 Viscosity too high Suction height too great 	 Adjust suction height
	 Leakage on the suction side 	 Aujust suction height Replace the suction hose or seal the connection points
	 Filter unit is mounted on a vibration-sensitive 	 (retighten them) > Improve your local conditions
	base (sheet metal)	
Pump does not suck	> Leakage on the suction side	 Replace the suction hose or seal the connection points (retighten them)
	• Sealing plug of the screen element is leaking	> Check / replace sealing ring, check tightening torque
	 Unit is pumped empty (when refilling) 	> Prime the unit (0.5 I to 3 I)
Cleanliness classes displayed on the	 Max. dirt capacity of the filter element is reached 	Replace filter element
LubMon Visu do not change during cleaning	 Leakage at the suction hose, falsification of the measurement results by free air in the oil (air bubbles) 	 Check the suction connection, if necessary, tighten the hose clips / check the oil for foaming or air bubbles and eliminate the cause. If the cause cannot be eliminated, take the oil sample and have it evaluated in the laboratory. Vent the filter unit
	 Rotary valve on lever position "Pumping" 	 No particle counting is possible with the lever position "Pumping"
Cleanliness classes displayed on the	 Max. dirt capacity of the filter element is reached 	Replace filter element
LubMon Visu become poorer during cleaning	 Leakage at the suction hose, falsification of the measurement results by free air in the oil (air bubbles) 	 Check the suction connection, if necessary, tighten the hose clips / check the oil for foaming or air bubbles and eliminate the cause. If the cause cannot be eliminated, take the oil sample and have it evaluated in the laboratory. Vent the filter unit
	 Rotary valve on lever position "Pumping" 	 No particle counting is possible with the lever position "Pumping"
Displayed cleanliness classes are not plausible	 Viscosity range below or exceeded. Particle counter is supplied with too little or too much oil 	 Adjust the fluid temperature (also see operating conditions)
	 Rotary valve on lever position "Pumping" 	 No particle counting is possible with the lever position "Pumping"
After cleaning for high cleanliness classes no further improvement (e.g. order number 10 at 4, 6 and 14 µm).	 Set measuring time is too short 	 Observe the defined limit values for oils with cleanliness classes according to ISO 4406. Upper limit value: 24 (for 4, 6 and 14 µm) Lower limit value: 10 (for 4, 6 and 14 µm)

Table 7: Error description

17.1 Dimension drawing

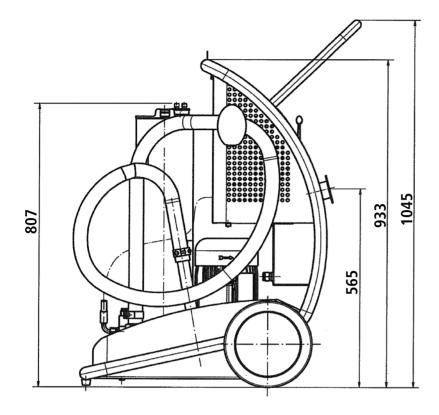

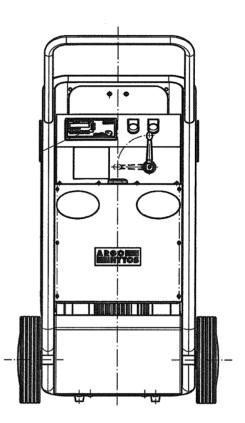

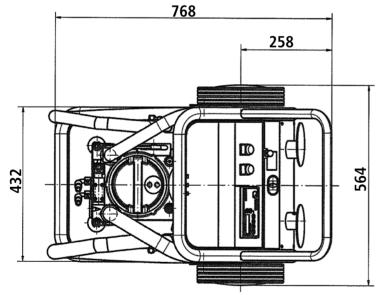


Fig. 30: Dimension drawing

17.2 Technical data

	14 1 (= 2 + 1 - 2	
Nominal flow	l/min (50 Hz) l/min (60 Hz)	45 54
Pressure relief valve	bar	6 ± 0.5
Pressure holding valve	bar	2.5 ± 0.5
Max. operating pressure	bar	7
Filter element		$\begin{array}{l} \forall 7.1560\text{-}103 \ \beta3(c) \geq 200 \\ \forall 7.1560\text{-}03 \ \beta5(c) \geq 200 \\ \forall 7.1560\text{-}05 \ \beta8(c) \geq 200 \\ \forall 7.1560\text{-}06 \ \beta10(c) \geq 200 \end{array}$
Clogging indicator		Electrical clogging indicator DG 042-x $p = 2.0 \pm 0.3$ bar
Suction side		Connection G ¼ " with hose DN 32 and suction lance (when replacing the suction hose only use a spiral hose)
Pressure side		Connection G1 "with hose DN 25 and pressure lance
Suction strainer		Screen element 280 µm
Electric drive		1-Phase alternating current motor 230 V; 50 Hz; 1.1 kW; n = 1,500 min ⁻¹ ; BG 90 3-Phase AC motor 400 / 460 V; 50 / 60 Hz; 1.1 kW; n = 1,500 / 1,800 min ⁻¹ ; BG 90
Tare	kg	approx. 97
Sound power level	db(A) max.	max. 73 (Under operating conditions permissible for continuous operation) max. 78 (Under operating conditions permissible for short-term operation)
Dimensions	l x w x h	786 x 564 x 1,045

Table 8: Technical data

17.3 Operating conditions



Risk of burns Contact temperatures according to DIN EN563 (3) and DIN EN13202 (4) may be exceeded during operation.

> Allow the filter unit to cool down before touching it.

NOTE



Variable viscose behavior

> Viscosities of a medium are always temperature-dependent.

Electric drive 1 ~ 230 V 50 Hz	mm ² /s (min. continuous operation) mm ² /s (max. continuous operation)	15 600 (An exact determination of the cleanliness class is possible in a viscosity range of 15 mm ² /s to 250 mm ² /s.)
Electric drive 3 ~ 400 V 50/60 Hz	mm ² /s (min. continuous operation) mm ² /s (max. continuous operation)	15 600 (An exact determination of the cleanliness class is possible in a viscosity range of 15 mm ² /s to 250 mm ² /s.)
Permissible temperature range	Hydraulic fluid °C Surroundings °C	10 65 0 50
Permissible suction heights	m (max.) first use m (max.) operating condition	2 6
Media resistance		Hydraulic fluids based on mineral oil, rapeseed oils and synthetic esters.
Mains fuses		230 V, 50 Hz, 16 A 400/460 V, 50/60 Hz, 16 A
Working position		standing

17.4 Hydraulic circuit diagram

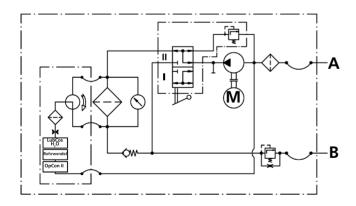


Fig. 31: Hydraulic diagram

18.1 Declaration of conformity

EU - Konformitätserklärung

EU - Declaration of Conformity





ARGO-HYTOS Polska sp. z o.o. Władysława Grabskiego 27 32-640 Zator

Tel.: +48 33 873 16 52 Fax: +48 33 873 19 15 www.argo-hytos.com

Die EU - Konformitätserklärung gilt für folgendes Gerät:

The EU - Declaration of Conformity applies to the following unit:

Filteraggregat

Filter Unit

UMPC 045

Wir bestätigen die Übereinstimmung mit den wesentlichen Anforderungen der europäischen Richtlinie(n):

Maschinenrichtlinie 2006-42-EG

EMV Richtlinie 2004/108/EG

We confirm the conformity according to the essential requirements of the European directive(s):

Machinery Directive 2006/42/EC

EMC Directive 2004/108/EC

Folgende Norm(en) wurde(n) angewandt:

The following standard(s) was (were) applied:

DIN EN 809 DIN EN 60204-1 (VDE 0113-1: 2007-06

Zator, 22.11.2016

(Ort und Datum der Ausstellung)

(Place and date of issue)

A. Nowonyta

(Unterschrift) Arkadiusz Noworyta/ Vorsitzender des Vorstandes

(Signature) Arkadiusz Noworyta/ President of the Board

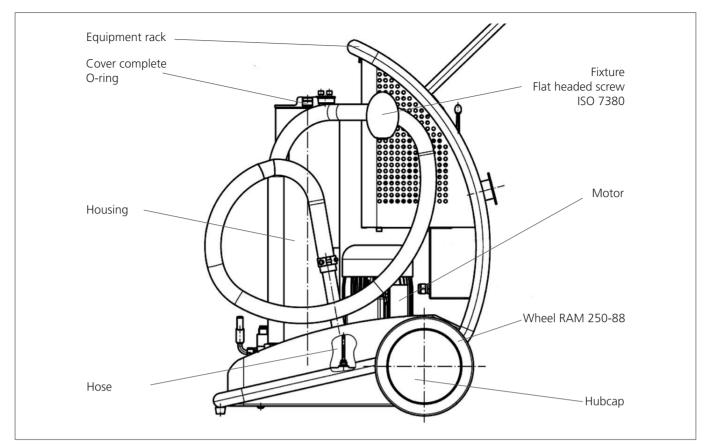


Fig. 32: Spare parts drawing 1

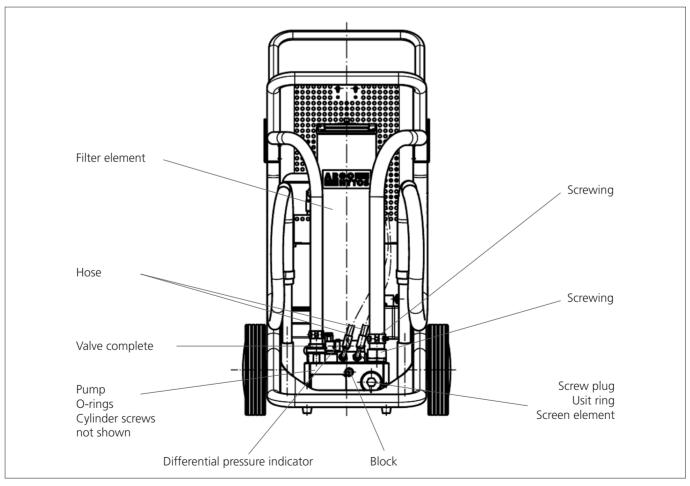


Fig. 33: Spare parts drawing 2

www.argo-hytos.com

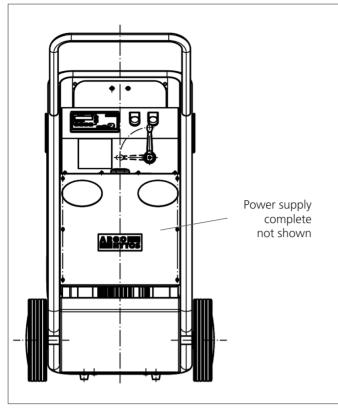
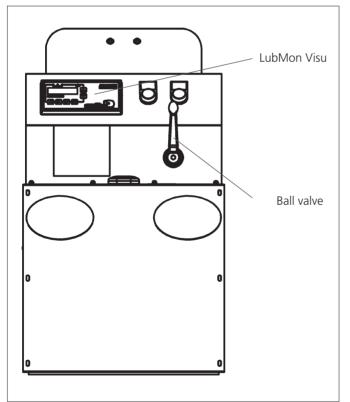


Fig. 34: Spare parts drawing 3





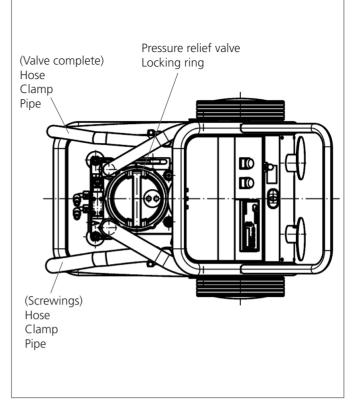


Fig. 35: Spare parts drawing 4

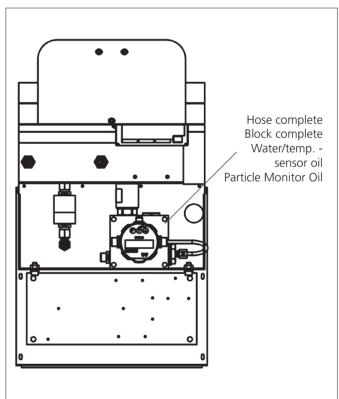


Fig. 37: Spare parts drawing 6

Lfd. Nr.	Designation	Pieces	Order No.	Comment
1	Housing	1	FNA 045.0103	
2	Cover complete	1	FNA 045.1210	incl. Pos. 3
3	O-ring	1	N007.1455	NBR
4	Equipment rack	1	UM 045.1735	
5	Fixture	2	UM 045.0758	
6	Flat headed screw ISO 7380	4	13674300	
7	Motor	1	FNA.045.1760	1~230 V / 50/60 Hz
8	Wheel RAM 250-88	2	UM 045.0710	
9	Hubcap	2	UM 045.0711	
10	Hose	1	17422700	
11	Pump	1	FNA 045.1900	incl. Pos. 10 + 11
12	O-ring	1	N007.1123	NBR
13	O-ring	1	N007.1023-1	FKM
14	Cylinder screw ISO 4762	4	13356000	M8x50, not shown
15	Cylinder screw ISO 4762	4	13532100	M8x70, not shown
16	Valve complete	1	17711200	
17	Hose	2	17505401	
18	Filter element	1	V7.1560-103	3 μm (c)
19	Screwing	1	17256700	
20	Screwing	1	17256800	
21	Screw plug DIN 908	1	13526600	
22	USIT-ring	1	17523000	
23	Screen element	1	S9.0417-13	
24	Block	1	15140501	
25	Differential pressure indicator	1	DG 041-44	
26	Power supply complete	1	31168900	
27	Hose	1	UM 045.0750 o. Z.	
28	Clamp	2	UM 045.0752 o. Z.	
29	Pipe	1	UM 045.0756	
30	Pressure relief valve	1	17008401	
31	Locking ring	1	FNA 045.0704	
32	Hose	1	UM 045.0751 o. Z.	
33	Clamp	1	UM 045.0753 o. Z.	
34	Pipe	1	UM 045.0757	
35	Ball valve	1	FA 016.0725	
36	LubMon Visu	1	SCSO 900-1000	
37	Hose complete	1	31982900	
38	Block complete	1	33564300	
39	Water / temperature sensor oil	1	SCSO 300-1000	
40	Particle Monitor Oil	1	SPCO 300-1000	

Table 9: Spare parts list



International

ARGO-HYTOS worldwide

Benelux	ARGO-HYTOS B. V.
Brazil	ARGO-HYTOS AT Fluid Systems Ltda.
China	ARGO-HYTOS Fluid Power Systems (Yangzhou) Co., Ltd.
	ARGO-HYTOS Fluid Power Systems (Beijing) Co., Ltd.
	ARGO-HYTOS Hong Kong Ltd.
Czech Republic	ARGO-HYTOS s.r.o
	ARGO-HYTOS Protech s.r.o
France	ARGO-HYTOS SARL
Germany	ARGO-HYTOS GMBH
Great Britain	ARGO-HYTOS Ltd.
India	ARGO-HYTOS PVT. LTD.
Italy	ARGO-HYTOS srl
Poland	ARGO-HYTOS Polska sp. z o.o.
Russia	ARGO-HYTOS LLC
Scandinavia	ARGO-HYTOS Nordic AB
Turkey	ARGO-HYTOS
USA	ARGO-HYTOS Inc.

info.benelux@argo-hytos.com info.br@argo-hytos.com info.cn@argo-hytos.com info.cn@argo-hytos.com info.hk@argo-hytos.com info.cz@ argo-hytos.com info.protech@argo-hytos.com info.fr@argo-hytos.com info.de@argo-hytos.com info.uk@argo-hytos.com info.in@argo-hytos.com info.it@argo-hytos.com info.pl@argo-hytos.com info.ru@argo-hytos.com info.se@argo-hytos.com info.tr@argo-hytos.com info.us@argo-hytos.com

